



Nashville Telecaster® Wiring Diagram

3-Way Switch / Master Volume & Tone / Middle "On" Push Pull Engages Middle Pickup

Note: No jumpers are depicted. Make sure all metal is properly grounded. If using a metal plate, no jumpers are required - the plate grounds the metal.

